

# Clear Glass Shower Shelves



## INSTALLATION INSTRUCTIONS

### 1. SURFACE PREPARATION

All suitable surfaces being adhered to should be structurally sound and free of any substance that could prevent adhesion.



### 2. PLACEMENT & LEVELING

Place shelf in position and check for level and pitch.




### 3. MEASURING & CUTTING

Measure (or template) the shelf into position and cut an insert into wall backerboard.



### 4. SETTING

Insert shelf into cut opening, adhere and seal around seams with silicone or caulking, install tile around, and finish with coordinating caulking around tile joints.

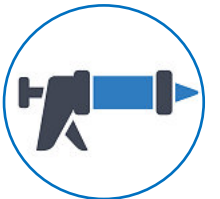

### 5. CLEANING

Clean adhesive, caulking and stabilizers as you go after setting and finishing.



### 6. CURING

Allow 24-48 hours for adhesive and caulking to cure before using or exposing to water.



Please contact [its-support@ilginc.com](mailto:its-support@ilginc.com)  
for more information on pricing.

[www.its-florida.com](http://www.its-florida.com)